

OPERATING & SAFETY GUIDE

ARCADE MACHINE

GENERAL SAFETY

Contact us for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood the instructions in this leaflet.

Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the set up area. Ensure the floor is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact us, do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

OPERATING GUIDE

For Indoor Use Only

Operating instructions can be found attached to the unit.

The unit requires 240v electric connection. Position the unit where it is to be used, well away from any heat source and with sufficient clearance all round for air circulation.

Ensure that it is on a level surface and once in position, lock the castors to ensure the unit will not move unexpectedly.

Connect the power lead to a standard 240v electrical socket.

Unit can be configured for coin operated or free play but will be delivered set for free-play as standard.

OPERATING GUIDE cont'd

Push button P1 to activate joystick and scroll through games left and right.

Highlight the game you wish to play and load it by pressing button P1.

To exit the game and return to the main menu, you must reach "Game Over" after which you will be returned to the main menu screen.

EQUIPMENT CARE

When not in use, switch off and unplug the unit.

To clean, wipe the unit with a dry cloth only.