

OPERATING & SAFETY GUIDE

ROTARY TOASTER

GENERAL SAFETY

Contact us for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact us. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

OPERATING GUIDE

Suitable for indoor use only.

Position the unit where it is to be used and ensure that it is level. The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked. The toaster should be clear of any flammable surface. Ensure that the crumb tray and toast collector are positioned correctly.

Connect the appliance to the mains power supply. Switch the unit on via the On/Off switch

Set the desired speed and temperature using the control knobs. Allow approximately 15 minutes for the unit to warm up. The toaster has the ability to produce 350-400 slices of toast per hour.

Switch off using the On/Off switch, disconnect from the power supply and allow the toaster to cool before moving or cleaning.

CLEANING

Disconnect from the mains supply before cleaning and allow the toaster to cool.

Do not immerse the appliance in water or clean with a water jet. Remove the crumb tray and clean daily.

Clean any crumbs from the elements (using only a soft brush), the toaster turned upside down and shaken out.

Never insert a fork or other sharp instrument to remove torn pieces of bread as the elements may be damaged.

Use a damp cloth to wipe off the outside surface of the toaster. Do not use bleach or any corrosive detergent as they will damage the surface of the unit.