

# OPERATING & SAFETY GUIDE

## STRAIGHT BOTTOMS UP ZIP BAR UNIT

eventhireGroup

### GENERAL SAFETY

Contact us for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the set-up area.

Ensure the floor where the bar units are to be sited is level and free from trip hazards and is non-slip.

Never set up or use the bar if you are ill, tired or under the influence of alcohol or drugs.

Never plug in or operate electrical switches with wet hands. Always switch off and unplug the bar RCD protected power lead from the main power supply before dismantling, moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

### ELECTRICAL SAFETY

The bar lighting unit are interconnecting and designed to plug directly into a standard 240volt, 13 amp socket.

Make sure the bar light units and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact us, do not try to repair it yourself.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water or where they may get wet, over sharp objects or where they may be a trip hazard.

The lighting units are supplied with an RCD (Residual Current Device) power lead to reduce the risk of electric shock.

### OPERATING GUIDE

Position the bar units on a level floor that is free from trip hazards and is non-slip.

Once the bar units are assembled adjacent to each other, the interconnecting cables for the light units can be joined, before any are attached to the power source.

The lighting units are supplied with an RCD (Residual Current Device) power lead to reduce the risk of electric shock.

Once the units are interconnected and the RCD power lead is connected to the power source, the units are permanently live (ie. no on/off switches for sockets or lights).

Any LED light replacement can only be carried out by the service team at the Event Hire depot as all lights are hard-wired in.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Make sure the RCD power lead is disconnected from the power socket before disconnecting the interconnecting lighting cables and dismantling the bars.


*See Bottoms Up Control Panel navigation key on page 2..*

# OPERATING & SAFETY GUIDE

STRAIGHT BOTTOMS UP ZIP BAR UNIT

eventhireGroup

## Bottoms Up Control Panel NAVIGATION OVERVIEW

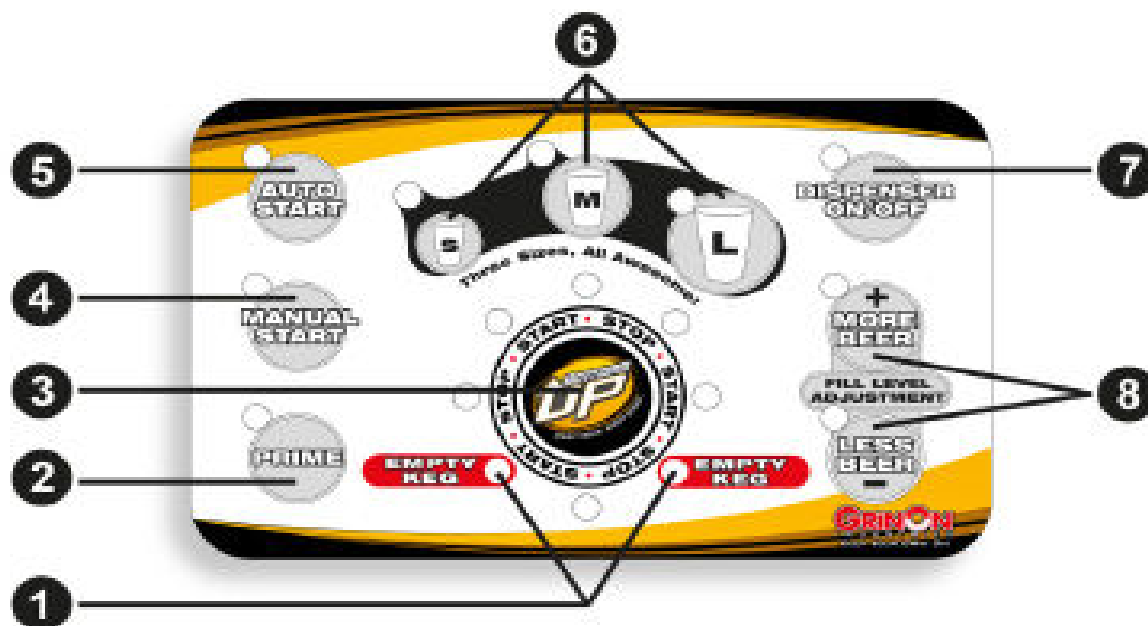

### 1 EMPTY KEG Indicator Lights

Only when paired with the Empty Keg Detector, lights flash red when keg is empty

### 2 PRIME

Placing the unit in prime mode will allow the valve to stay open as long as you need to prime the lines. Use the **Start/Stop** button to control flow.

### 3 START/STOP

Starts and stops the flow of beer. For use when programming a size, priming lines, topping off a pour or stopping an over pour.

### 4 MANUAL START

Used to control filling with the **Start/Stop** button.

### 5 AUTO START

Used so that filling automatically starts once a cup is placed on a nozzle

### 6 FILL SIZE

Change between three different fill sizes with a push of a button. Must program sizes beforehand. (see How to Program a size)

### 7 ON/OFF

Turns keypad on and off

### 8 FILL LEVEL ADJUST

Adjusts the currently programmed size with 2% more or less beer without having to reprogram the size. **Only adjust between use.** Adjustment takes place on next beer poured. Size button will flash when pressed.